



The new degree of comfort.™



Water Heaters  
Water Heater Booster

## The Rheem Water Heater Booster works with your tank to provide hot water past the tank's capacity

### Installs on Electric or Gas Tank

The Rheem Water Heater Booster installs directly on a tank's hot water line to provide more hot water than the tank alone can provide. The unit senses the temperature of the water from the tank outlet, and activates when it senses that its inlet temperature has dropped below the user set activation temperature.

### Product Attributes

- Compact design
- Dimensions: 8-1/4" H x 12-5/8" W x 3-5/8" D
- Digital user interface
- Adjustable activation temperature 80-130°F (27 - 54 C)

- Adjustable outlet temperature 80-140°F (27 - 60 C)
- Easy installation on new or existing water heater
- No need for additional electrical infrastructure if installed on existing 208/240V electric water heater. Additional wiring may be required for a gas tank installation.
- Field replaceable element



### Warranty

- 5-Year heating chamber and 1-year parts limited warranty

See Residential Warranty Certificate for complete information



MODEL NUMBER	KW	VOLTS	MAX. AMPS	BREAKER	WATER CONNECTIONS
RTEX-AB7	7.2	240	30	1X30 AMP Double Pole	3/4" NPT Fittings

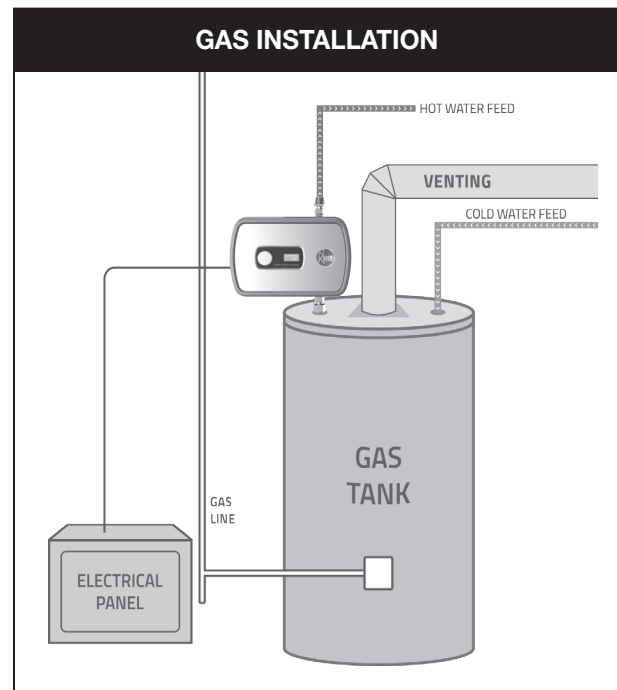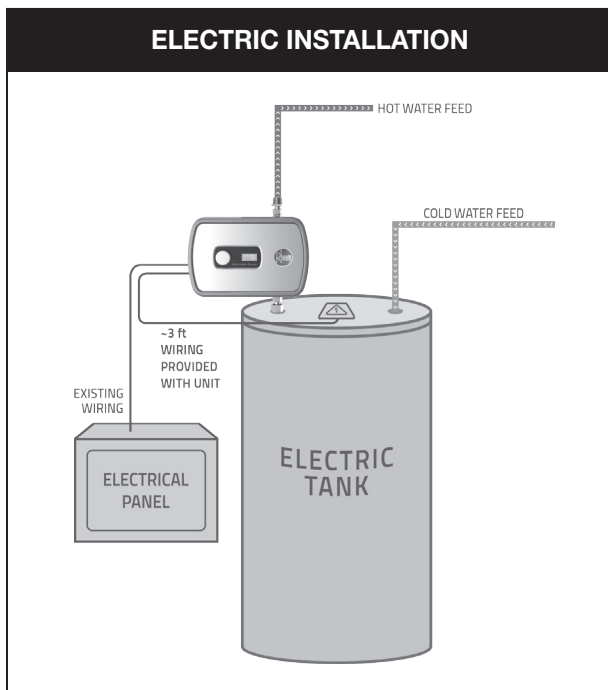

- Unit may be wall mounted if available space is limited.



INTEGRATED HOME COMFORT

Rheem.com



The new degree of comfort.™



Water

Water Heaters  
Water Heater Booster

## Specifications

MODEL NUMBER	VOLTAGE	PHASE	KW	MAX. AMPS	WEIGHT (LBS.)	PRE-SET OUTLET TEMP.
RTEX-AB7	240 VAC	Single	7.2	30	5.64	120°


### Suggested Specification

Water heater shall be a Rheem Water Heater Booster model number RTEX-AB7.

Rheem Water Heater Booster to be connected to a tank water heater for increased hot water delivery. Water Heater Booster to utilize existing electrical infrastructure of electric tank water heater. Water Heater Booster compatible with gas tank water heater using dedicated 30 amp breaker. Water Heater Booster to be mounted in horizontal orientation with inlet on the bottom and outlet on the top. Water Heater Booster water connections are Inlet 3/4" FNPT, and outlet 3/4" MNPT. Water Heater Booster may be wall mounted if available space is limited.

### Special Design Service

Inquiries for units for unique applications are welcome. Call our Technical Service Department at **800-374-8806**.

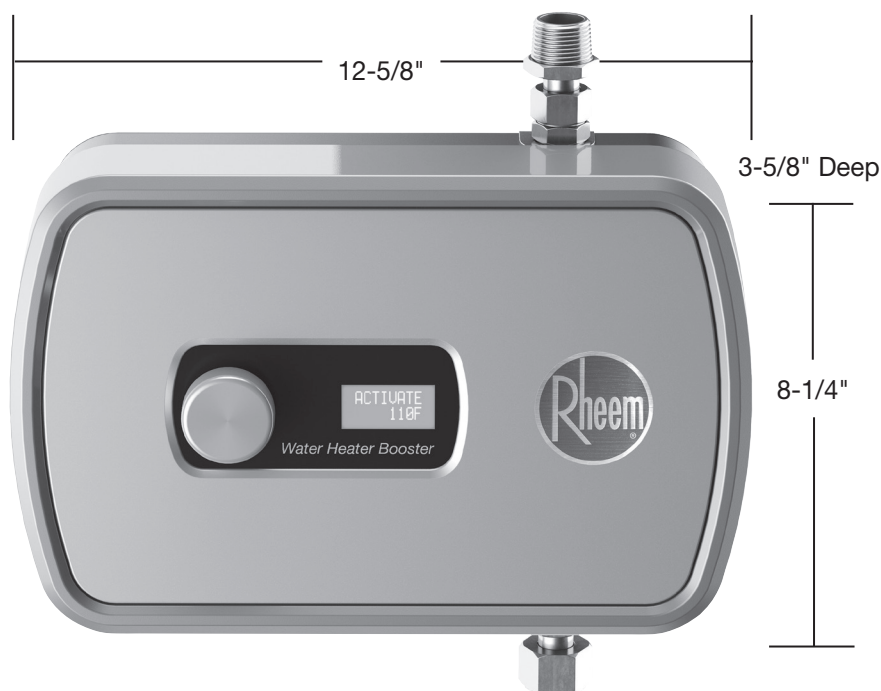

### Fitting Adapters Installed on the Rheem Water Heater Booster

1/2" CF CONNECTION	FITTING ADAPTER
For 3/4" Copper Tube INLET	3/4" NPT Female
For 3/4" Copper Tube OUTLET	3/4" NPT Male

*In keeping with its policy of continuous progress and product improvement, Rheem reserves the right to make changes without notice.*

Rheem Canada Ltd. / Ltée • 125 Edgeware Road, Unit 1  
Brampton, Ontario L6Y 0P5 • www.rheem.com

Rheem Water Heating • 1115 Northmeadow Parkway, Suite 100  
Roswell, Georgia 30076 • www.rheem.com



INTEGRATED HOME COMFORT