

MODEL: S802V Downflow Gas Furnaces

FORM NO. GSC-551 REV. 6



Sure Comfort[®] S802V Downflow Gas Furnaces

• Models with Input Rates from 75 to 125 kBTU [22 to 37 kW]




- 80% residential Gas Furnace CSA certified
- Two stages of operation to save energy and maintain optimal comfort level.
- Variable speed blower motor technology provides ultimate humidity control, quieter sound levels, and year round energy savings
- Diagnostics 7 Segment LED all units
- Ignition System DSI for reliability and longevity
- Heat exchanger is removable for improved serviceability. Aluminized steel construction provides maximum corrosion resistance and thermal fatigue reliability.

- Low profile 34" cabinet ideal for space constrained installations
- Integrated Control board features dip switches for easy system set up
- Insulated blower compartment
- QR code for quick access to product information from your smart phone or tablet
- Compatible with single or two stage thermostats. For optimal performance a two stage thermostat is recommended.

Table of Contents

Standard & Optional Equipment	3
Model Features/Physical Data & Specifications	4
Model Number Identification	5
Dimensional Data	6
Blower Performance Data	7
Accessories	8
Limited Warranty	9

Sure Comfort[®] S802V Downflow Gas Furnaces

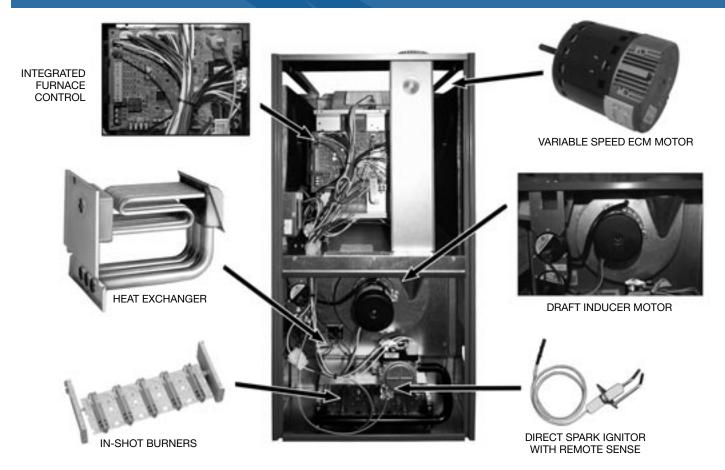

STANDARD EQUIPMENT

Completely assembled and wired; 2 speed induced draft blower; high and low pressure switches; 2 stage redundant main gas control; blower compartment door safety switch; solid state time on/time off blower control; limit control; transformer; ECM blower motor. Furnaces are equipped with cooling/heating relay and transformer (50VA) ready for air conditioning applications. (Please note: a thermostat is not included as standard equipment.) Flame sensor diagnostics; fused-protection (secondary), **3rd speed option for continuous fan.**

OPTIONAL EQUIPMENT

NOTE: Furnace is not listed for use with fuels other than natural or L.P. (propane) gas.

The complete terms of limited and other warranties are available at our sales office, or through local installer.

All models can be converted by a qualified Sure Comfort distributor or local service dealer to use L.P. (propane) gas without changing burners. Factory approved kits must be used to convert from natural to L.P. (propane) gas and may be ordered as optional accessories from a Sure Comfort parts distributor.

For L.P. (propane) operation, refer to Conversion Kit Index Form.

NOTE: For natural and L.P. (propane) gas models, direct spark ignition is 100% lockout type.

WARNING THIS FURNACE IS NOT APPROVED OR RECOMMENDED FOR USE IN MOBILE HOMES

Model Features

- 80% residential Gas Furnace CSA certified
- Two stages of operation to save energy and maintain optimal comfort level.
- Variable speed blower motor technology provides ultimate humidity control, quieter sound levels, and year round energy savings
- Enabled HVAC product
- 7 Segment LED all units
- · Direct Spark Ignition for reliability and longevity
- Heat exchanger is removable for improved serviceability. Aluminized steel construction provides maximum corrosion resistance and thermal fatigue reliability.

- Low profile 34" cabinet ideal for space constrained installations
- Integrated Controls board features dip switches for easy system set up
- Insulated blower compartment
- QR code for quick access to product information from your smart phone or tablet
- Compatible with single or two stage thermostats. For optimal performance a two stage thermostat is recommended.

Physical Data and Specifications—Downflow Models

MODEL NUMBERS S802V (DF) SERIES		S802VA075317Z*B	S802VA075421Z*B	S802VA100521Z*B	S802VA125524Z*B	
100% High Input–BTU/I	Hr [kW] ②	75,000 [22]	75,000 [22]	100,000 [29]	125,000 [37]	
High Heating Capacity-I	High Heating Capacity–BTU/Hr [kW] ①		60,000 [18]	80,000 [23]	100,000 [29]	
70% Low Input–BTU/Hr [kW]		52,500 [15]	52,500 [15]	70,000 [20]	87,500 [25]	
Low Heating Capacity–E	3TU/Hr [kW]	42,000 [12]	42,000 [12]	56,000 [16]	70,000 [20]	
Heating–Ext. Static Pres	sure [kPa]	.12 [.029]	.12 [.029]	.15 [.037]	.20 [.05]	
Blower (D x W) [mm]		11 x 7 [279 x 178]	11 x 10 [279 x 254]	11 x 10 [279 x 254]	11 x 10 [279 x 254]	
ECM Motor H.P. [W]		1/2 [373]	³ /4 [559]	1 [746]	1 [746]	
Min. Circuit Ampacity		9	11	15	15	
Min. Overload Protection Device		15	15	20	20	
Max. Overload Protectio	on Device	15	15	20	20	
Factory Heating CFM [L/s]		1254 [592]	1305 [616]	1651 [779]	1830 [864]	
Cooling CFM @ .5" [kPa] E.S.P. (Nominal) [L/s] (Range)		600-1200 [283]-[566]	1000-1600 [472]-[755]	1200-2000 [566]-[944]	1200-2000 [566]-[944]	
Max. E.S.P. (In. W.C.) [k	(Pa]	0.8 [0.2]	0.8 [0.2]	0.8 [0.2]	0.8 [0.2]	
Temperature Rise	High Fire	30-60 [17-33]	25-55 [14-31]	30-60 [17-33]	35-65 [19.4-36.0]	
Range °F [°C]	Low Fire	20-50 [11-28]	20-50 [11-28]	25-55 [14-31]	30-60 [17-33]	
Max. Outlet Air Temp. °I	F [°C]	165 [73.9]	165 [73.9]	165 [73.9]	185 [85]	
Approx. Shipping Weigh	nt (Lbs.) [kg]	115 [52]	115 [52]	120 [54]	140 [63]	
AFUE ①		80%	80%	80%	80%	

Notes: All models are 115V, 60 Hz, 1 Ph. Gas connection size for all models is 1/2" [12 mm] N.P.T.

① In accordance with D.O.E. test procedures.

O See Conversion Kit Index Form for high altitude derate in U.S. applications.

This furnace does not meet air district requirements of 14 ng/J NOx emissions limit, and thus is subject to a mitigation fee of up to \$450. This furnace is not eligible for the Clean Air Furnace Rebate Program: www.CleanAirFurnaceRebate.com.

This furnace is to be installed for propane firing only in air districts requiring 14 ng/J NOx emission limits. Operating in natural gas mode is in violation of these Rules.


[] Designates Metric Conversions


Model Number Identification—Downflow Models

<u>s</u>	<u>80</u>	<u>2</u>	V	<u>A</u>	075	<u>4</u>	<u>17</u>	Z	<u>s</u>	<u>A</u>
Sure Comfort	80 = 80% AFUE	2 = Two Stage	V = Variable Speed ECM	Design Series A = 1st Design	Input <u>BTU/HR [kW]</u> 075 = 75,000 [22] 100 = 100,000 [29] 125 = 125,000 [37]	$\begin{array}{l} 3 = Up \ to \\ 3 \ Ton \\ 4 = 2^{1/2} \ to \\ 4 \ Ton \\ 5 = 3^{1/2} \ to \\ 5 \ Ton \end{array}$	Cabinet Width 17 = 17.5" 21 = 21" 24 = 24.5"	Z = Down and Zero Clearance Downflow	X = Low NOx S = Standard	Revision- Marketing (A – First Time Release) (B – 2nd Design Series)

[] Designates Metric Conversions

Downflow Dimensions

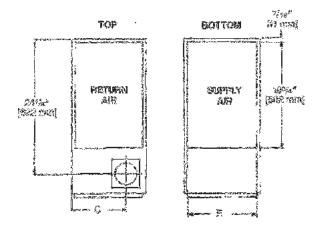

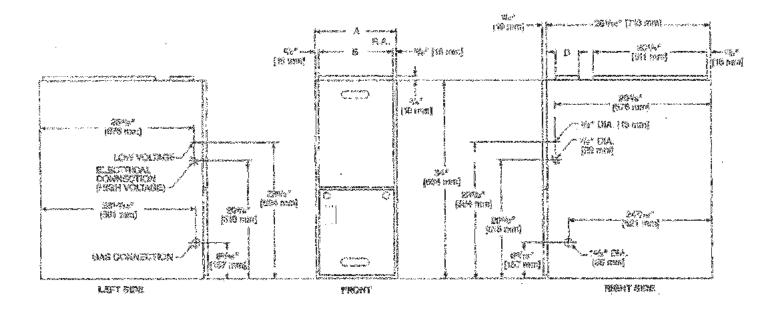

Dimensions and Clearance to Combustible Material (inches) [mm]

MODEL																	REDUCED CLEARANCES (IN.) [mm]					
S802V-	A	В	C	D	E	LEFT Side	RIGHT SIDE	BACK	ТОР	FRONT	VENT	SHIP. WGTS. (LBS.) [kg]										
075317	17 ¹ /2 [445]	16 ¹¹ /32 [415]	12 ¹ /8 [308]	1	16 ⁵ /8 [422]	0	3 ②	0	1 [25]	3 [76]	6 [152] ③	110 [49.9]										
075421	21 [533]	19 ²⁷ /32 [504]	137/8 [352]	1	201/8 [511]	0	0	0	1 [25]	3 [76]	6 [152] ③	115 [52.2]										
100	21 [533]	19 ²⁷ /32 [504]	137/8 [352]	1	201/8 [511]	0	0	0	1 [25]	3 [76]	6 [152] ③	120 [54.4]										
125	241/2 [622]	23 ¹¹ / ₃₂ [593]	15 ⁵ /8 [397]	1	23 ⁵ /8 [600]	0	0	0	1 [25]	3 [76]	6 [152] ③	140 [63.5]										

NOTES: 1) May require a 3" [76 mm] to 4" [102 mm] or 3" [76 mm] to 5" [127 mm] adapter.

2 May be 0" [0 mm] with type B vent.
3 May be 1" [25 mm] with type B vent.

Furnaces must be vented in accordance with the National Fuel Gas Code, ANSI Z223.1 and/or Can/CGA-B149 Installation Codes and in accordance with local codes.

[] Designates Metric Conversions

MODEL NUMBER				S802VA075317ZSA	S802VA075421ZSA	S802VA100521ZSA	S802VA125524ZSA			
TARGET GAS Heating Airflow		SW15 = OFF SW16 = OFF		1254	1305	1651	1830			
	HIGH	SW15 = 0N	SW16 = 0FF	1054	1173	1398	1600			
	HEATING CFM	SW15 = 0FF	SW16 = 0N							
		SW15 = 0N	SW16 = 0N	953	1001	1251	1550			
		SW13 = 0FF	SW14 = 0FF	980	1125	1300	1300			
	LOW HEATING CFM	SW13 = 0N	SW14 = 0FF	850	850	1075	1250			
		SW13 = 0FF	SW14 = 0N	DO NOT USE						
		SW13 = 0N	SW14 = 0N	750	700	875	1100			
	HIGH Cooling CFM	SW4 = OFF	SW5 = OFF	1200	1600	2000	2000			
		SW4 = 0N	SW5 = 0FF	1000	1400	1600	1600			
TARGET		COOLING CFM	SW4 = OFF	SW5 = 0N	800	1200	1400	1400		
COOLING/ HEAT-PUMP AIRFLOW		SW4 = 0N	SW5 = 0N	600	1000	1200	1200			
		SW4 = OFF	SW5 = 0FF	900	1200	1500	1500			
	LOW	SW4 = 0N	SW5 = OFF	750	1050	1200	1200			
	COOLING CFM	SW4 = OFF	SW5 = 0N	600	900	1050	1050			
		SW4 = 0N	SW5 = 0N	450	750	900	900			

Blower Performance Data—Downflow Models


DOWNFLOW ACCESSORIES

DOWNFLOW WARNING: Unit design is certified for installation on noncombustible floor. A special factory supplied combustible floor subbase is required when installing on a combustible floor. Failure to install the sub-base may result in fire, property damage and personal injury.

COMBUSTIBLE FLOOR BASE DIMENSIONS

COMBUSTIBLE Floor base	USE WITH Furnace Sizes	A IN. (r	nm]	B IN. [mm]	C IN. [mm]
RXGC-B17	R802VA075317	18 [[457]	163/4 [425]	143/4 [451]
RXGC-B21	R802VA075421, R802V100	21 ¹ /2 [[546]	20 ¹ /4 [514]	18 ¹ /4 [464]
RXGC-B24	R802V125	25 [[635]	233/4 [603]	213/4 [552]

[] Designates Metric Conversions

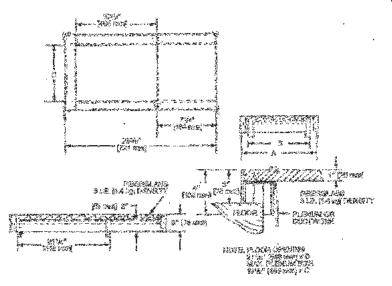

RXGF-CC*

FILTER RACK—Downflow top return mount. Requires (2) 14 x 20 Filters.

NOTE: Filter racks are shipped without filters.

*Filters available through PROSTOCK ®.

FOR HIGH ALTITUDES:

HIGH ALTITUDE OPTION CODE: U.S. None required for high altitudes. HIGH ALTITUDE CONVERSION KITS: U.S.

None required for high altitudes.

80+ HIGH ALTITUDE INSTRUCTIONS

Caution: Always follow National Fuel Gas Code (NFGC) guidelines when converting for high altitudes.

High altitude option codes are not required for these models. However, the burner orifice size needs to be recalculated and verified at elevations above 2000 ft. See Installation Instructions for more information.

GENERAL TERMS OF LIMITED WARRANTY*

Sure Comfort[®] will furnish a replacement for any part of this product which fails in normal use and service within the applicable period stated, in accordance with the terms of the limited warranty.

*For complete details of the Limited and Conditional Warranties, including applicable terms and conditions, contact your local contractor or the Manufacturer for a copy of the product warranty certificate.

PartsTen (10) Years	
Heat ExchangerLimited Lifetime	

www.SureComfort.com



Sure Comfort[®]

5600 Old Greenwood Rd., Fort Smith, AR 72908

Before proceeding with installation, refer to installation instructions packaged with each model, as well as complying with all Federal, State, Provincial, and Local codes, regulations, and practices.

8/19 QG FORM NO. GSC-551 REV. 6